

Wired V Chuk

Contents

- Wired V Chuk
- User instructions

Usage

- Connect your V Chuk to your Wii™ Remote or Wireless V Mote using the appropriate slot (see figures 1 and 2 overleaf).

Problems

If your V Chuk is not working;

- Check that the V Chuk is properly connected
- Check the Wii™ Remote or Wireless V Mote is working properly.

Recommendations

- Ensure you have ample room for playing in order to avoid knocking into other people and objects.
- If at any time you feel any joint pain in your hands, wrists, elbows or elsewhere, you should stop playing until the symptoms disappear and see your doctor.
- You are advised to take one fifteen minute break for every hour played.

