

Wireless V Mote

Contents

- Wireless V Mote
- 1 wrist strap
- User instructions

Usage

- Before use, attach the wrist strap to the end of the V Mote.
- Open the battery compartment to the underside of the V Mote insert 2x AA batteries (not included), ensuring correct polarity. Close battery compartment.
- Press the power button on the top left hand side of the controller to switch it on.
- Now synchronise the controller with the console (see figures 3 and 4 overleaf).

Standby mode

- The V Mote will automatically enter standby mode if not in use.
To exit standby mode, press any button on the V Mote.

Problems

If your V Mote is not working;

- Change the batteries
- The V Mote may be in standby mode. Press any button on the V Mote to exit standby mode
- Check that your V Mote is synchronised with your Wii™ console
- Check your Wii™ console instructions manual.

